


Subject to change, production tolerances have to be taken into account.

8 stund hovedarm → Flyjib : 800kg

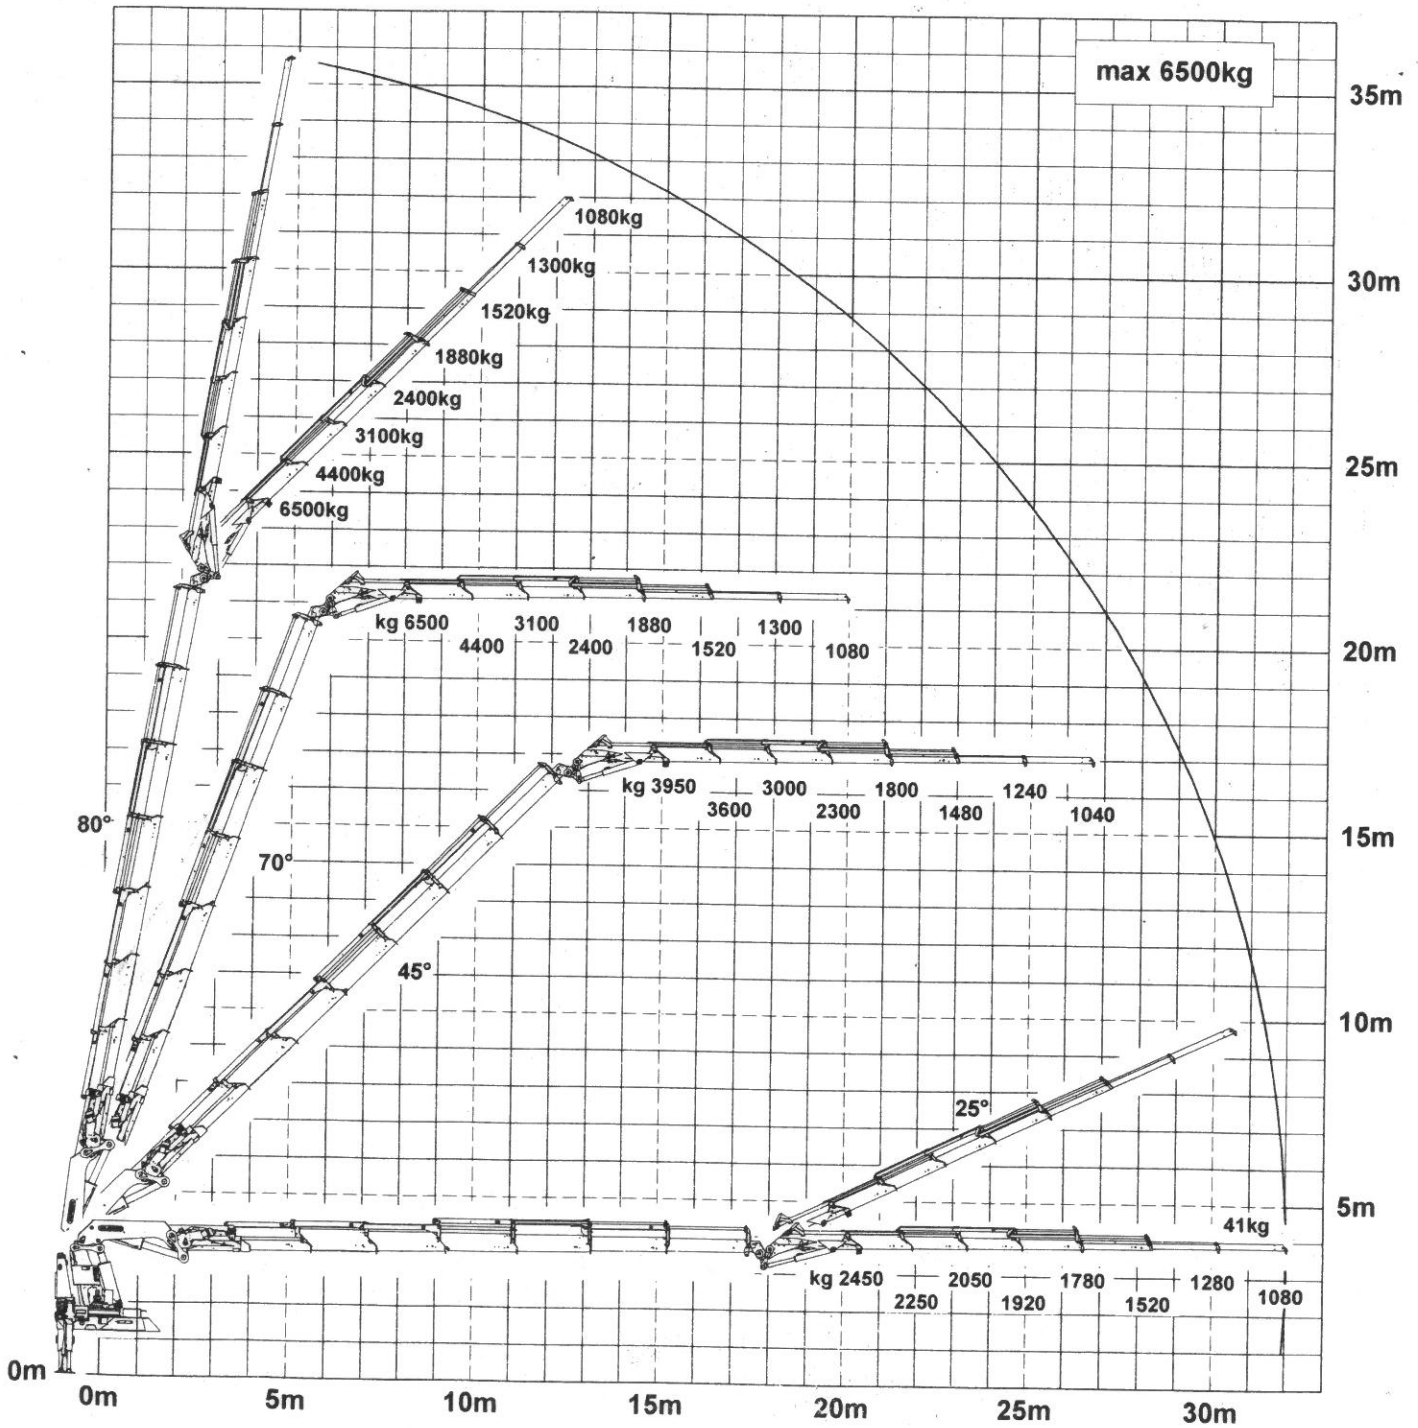

When using mechanical boom extensions, the loads shown on the charts need to be reduced by the weight of these extensions.

Symbolic crane figure, indications at 20° main boom position & load arm in horizontal position



For Rope winch load capacity refer to page

Page 020.20100